


W52201

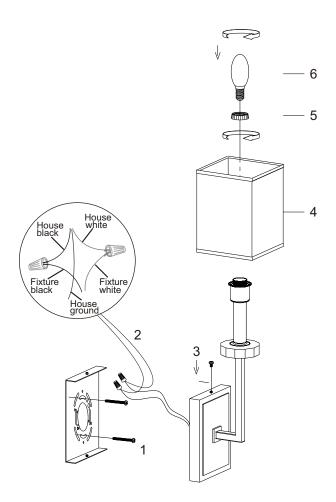

INSTALLATION INSTRUCTIONS:

- Ensure main supply is switched off.
- Fit mounting bracket (1) onto mounting surface with self-tapping screws.
- Connect wires (2) according to color (White to White, Black to Black). Connect all earth lug together onto the crossbar with green screw to tight.
- Fit wall base (3) onto mounting bracket with screws.
- Put the shade(4) on the socket.
- Use the ring(5) to fix the shade.
- Fit lamps (6) firmly into lampholders.
- · Reconnect power.

WARNING:

- This fitting must be earthed.
- Disconnect power and allow fitting to cool down before cleaning or changing the lamp.