



W52702CH

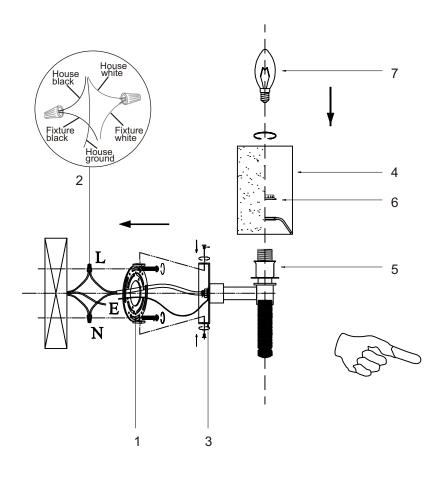

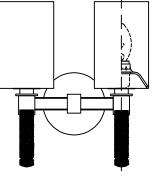

Front

INSTALLATION INSTRUCTIONS:

- Ensure main supply is switched off.
- Fit mounting bracket (1) onto mounting surface with self-tapping screws.
- Connect wires (2) according to color (White to White, Black to Black). Connect all earth lug together onto the crossbar with green screw to tight.
- Fit wall plate (3) onto mounting bracket with screws.
- Fit shade (4) onto the socket (5) by the cover (6).
- Fit lamp (7) firmly into lampholders.
- Reconnect power.

WARNING:

- This fitting must be earthed.
- Disconnect power and allow fitting to cool down before cleaning or changing the lamp.

MATTEO LIGHTING 103-19099 25th Ave. Surrey BC Canada V3S 3V2